

Konftel Remote Control

INSTALLING BATTERIES

Three AAA batteries are required for operation.



- ⇒ Remove the battery cover.
- ⇒ Check the polarity of the batteries and the “+/-” marks inside the battery compartment.
- ⇒ Insert the batteries following the marks.
- ⇒ Push the battery cover back in place.



Battery safety

- Use new batteries of the recommended type and size only.
- Do not mix old and new batteries.
- To help avoid the chance of chemical leaks remove the batteries from the remote if you do not intend to use the remote for an extended period of time.
- Dispose of old batteries properly. Do not burn or bury them.

PAIRING

- ⇒ Select **MENU > SETTINGS > REMOTE CONTROL** on the conference phone.
- ⇒ Press **OK** to set the conference phone in pairing mode.
- ⇒ Press the  and  buttons on the remote control simultaneously for three seconds.

The red LED on the remote control starts flashing and a pairing confirmation appears on the conference phone display.

Specifications

RF carrier frequency	433.92 MHz
Dimensions (W x H x L)	54 x 190 x 25 mm
Unit weight (excl. batteries)	90 g
Battery type	AAA x 3 pcs

FCC statements

1) Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2) This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

IC statements

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

